



1877025

K-Emily Queen Canopy Bed-Nickle

Parts and Hardware List

| | | |
|----|--------------------------------------|-------|
| A. | Headboard | 1 pc |
| B. | Footboard | 1 pc |
| C. | Side Rails | 2 pcs |
| D. | Side Support Slats | 2 pcs |
| E. | Central Support Slat | 1 pc |
| F. | Leg Supports | 4 pcs |
| G. | Long Canopy Rails | 2 pcs |
| H. | Short Canopy Rails | 2 pcs |
| I. | Long Posts | 2 pcs |
| J. | Short Posts | 2 pcs |
| K. | Finials | 4 pcs |
| L. | Allen Head Bolts (M8 x 25) | 8 pcs |
| M. | Large Flat Washers | 8 pcs |
| N. | Allen Head Bolts (M6 x 30) | 6 pcs |
| O. | Small Flat Washers | 6 pcs |
| P. | Nuts | 6 pcs |
| Q. | Short Allen Head Bolts | 4 pcs |
| R. | Spanner | 1 pc |
| S. | Large Allen Head Wrench | 1 pc |
| T. | Small Allen Head Wrench | 1 pc |
| U. | Optional Big Allen Screwdriver Bit | 1 pc |
| V. | Optional Small Allen Screwdriver Bit | 1 pc |


- * Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * Take care not to overtighten bolts if using supplied Allen Head Screwdriver Bit.
- * This item is to be assembled by an adult and is not intended to be taken apart by a child.




1877025

K-Emily Queen Canopy Bed-Nickle


Hardware Illustrations

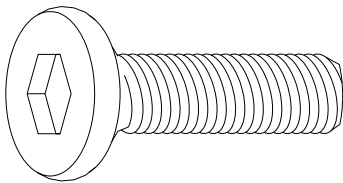


L. Allen Head Bolt (M8 X 25)

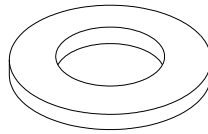


M. Large Flat Washer

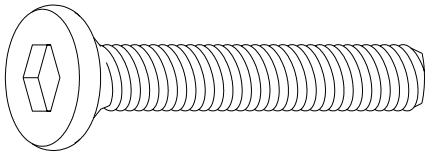


N. Allen Head Bolt (M6 X 30)



O. Small Flat Washer

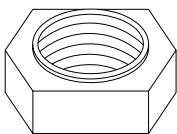

P. Nut

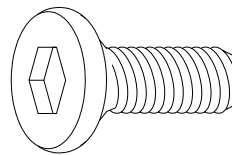

Q. Short Allen Head Bolt



1877025

K-Emily Queen Canopy Bed-Nickle

Attach Side Rails to the Headboard & Footboard

Parts required

| | | | |
|-------------------------------|-------|---------------------------------------|-------|
| A. Headboard | 1 pc | M. Large Flat Washers | 8 pcs |
| B. Footboard | 1 pc | S. Large Allen Head Wrench | 1 pc |
| C. Side Rails | 2 pcs | U. Optional Big Allen Screwdriver Bit | 1 pc |
| L. Allen Head Bolts (M8 x 25) | 8 pcs | | |

1. **Attach Side Rails (C)** Align the pre-drilled holes in the ends of the Side Rails (C) with the desired pre-threaded holes in the Headboard (A). Make sure the small square tube attached to the Side Rails (C) is facing the inside of the bed. Secure the Side Rails (C) to the Headboard (A) with the Allen Head Bolts (M8 x25) (L) and Large Flat Washers (M) using the Large Allen Head Tool (S or U). See Illustration #1.
2. Repeat step 1 to secure the Side Rails (C) to the Footboard (B). See Illustration #1.

NOTE: The upper set of holes in each post should be used to attach the side rails to allow the trundle to fit underneath.

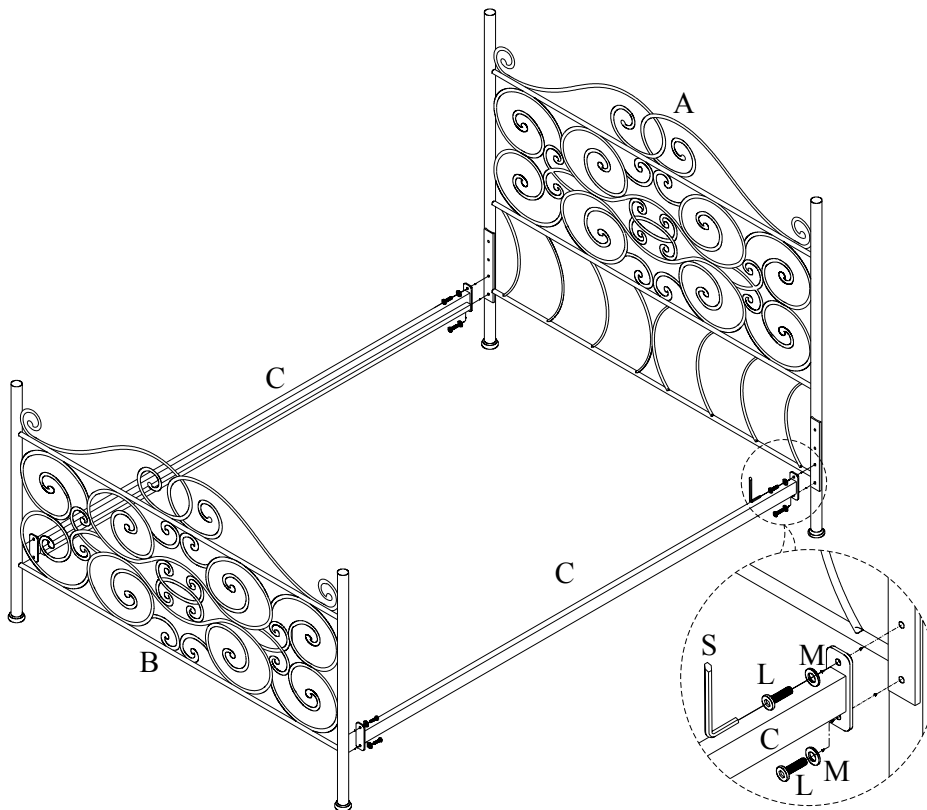


Illustration #1



1877025

K-Emily Queen Canopy Bed-Nickle

Attach the Leg Supports, Supports Slats & Canopy

Parts required

| | | | | | |
|----|----------------------|-------|----|--------------------------------------|-------|
| D. | Side Support Slats | 2 pcs | N. | Allen Head Bolts (M6 x 30) | 6 pcs |
| E. | Central Support Slat | 1 pc | O. | Small Flat Washers | 6 pcs |
| F. | Leg Supports | 4 pcs | P. | Nuts | 6 pcs |
| G. | Long Canopy Rails | 2 pcs | Q. | Short Allen Head Bolts | 4 pcs |
| H. | Short Canopy Rails | 2 pcs | R. | Spanner | 1 pc |
| I. | Long Posts | 2 pcs | T. | Small Allen Head Wrench | 1 pc |
| J. | Short Posts | 2 pcs | V. | Optional Small Allen Screwdriver Bit | 1 pc |
| K. | Finials | 4 pcs | | | |

Note: The leg supports (F) are not needed if there is a trundle underneath, so please omit step 3.

3. **Attach the Leg Supports (F)** Insert the Leg Supports (F) into the short tubes on the Side & Central Support Slats (D, E). Align the pre-threaded holes in the Leg Supports (F) with the pre-drilled holes in the short tubes. Secure in place with the Short Allen Head Bolts (Q) using the Small Allen Head Tool (T or V). See illustration #2.
4. **Attach Side Support Slats (D) & Central Support Slat (E)** With the square tube facing up, align the pre-drilled holes in the Side Support Slats (D) underneath the pre-drilled holes in the Side Rails (C). Secure in place with the Allen Head Bolts (M6 x 30) (N), Small Flat Washers (O), and Nuts (P), using the Small Allen Head Tool (T or V) and the Spanner (R). Repeat for Central Support Slat (E). See illustration #2.
5. **Attach Long & Short Posts (I, J)** Insert the exposed threads of Short Posts (J) into the pre-threaded holes in headboard posts and the exposed threads of Long Posts (I) into the pre-threaded holes of footboard posts, secure by turning in a clockwise direction. See illustration #2.
6. **Attach Long & Short Canopy Rails (G, H)** Insert the exposed threads of Finials (K) through the holes in the ends of Short Canopy Rails (H) and Long Canopy Rails (G) and into the pre-threaded holes in Long & Short Posts (I, J). secure by turning in a clockwise direction. See illustration #2.

Note: To Attach Finials (K) to Headboard & Footboard (A, B) without Canopy use Insert the exposed threads of Finials (K) into the pre-threaded holes in Headboard posts and Footboard posts. Secure by turning in a clockwise direction.



1877025

K-Emily Queen Canopy Bed-Nickle

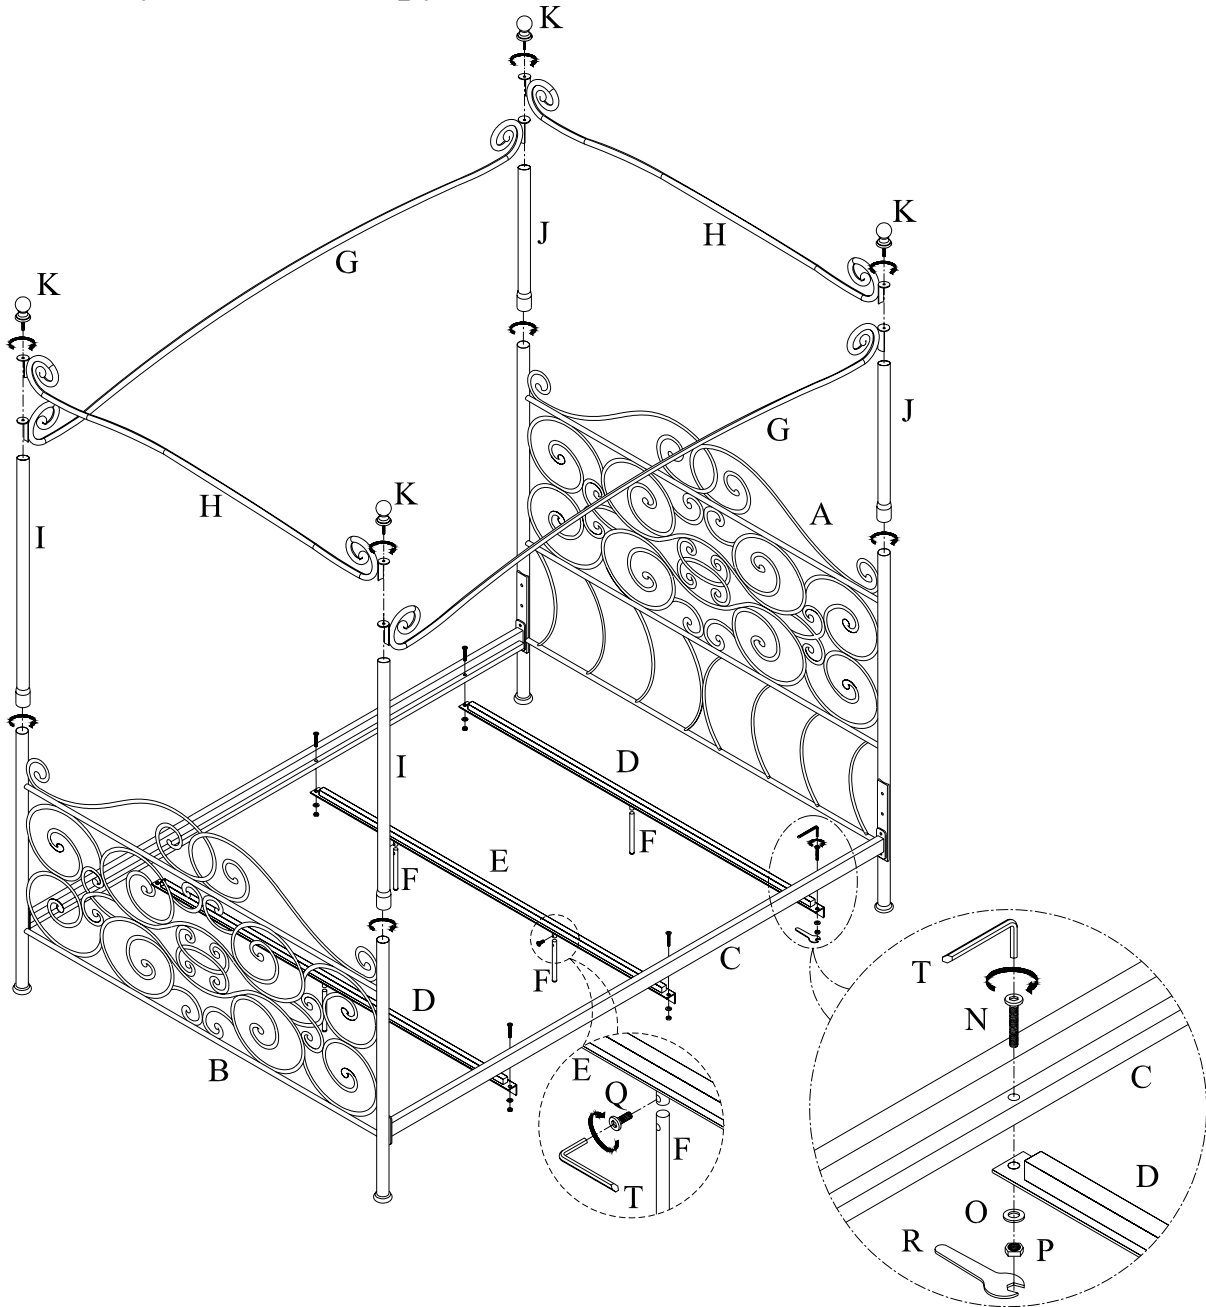


Illustration #2